 


LABQUEST
BY **BOROSIL®**

GLASSWARE DRYER

OPERATING MANUAL GDS020

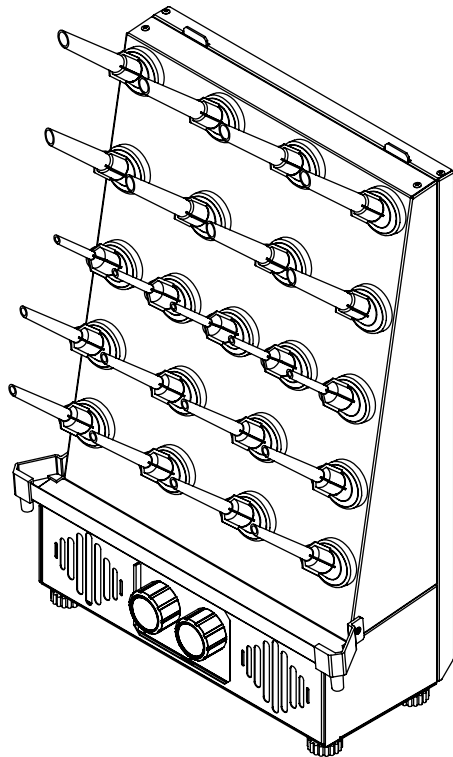

DEALER :

THANK YOU NOTE

We Borosil, one of India's most customer oriented brands truly appreciate your business and express our gratitude for the trust you have placed on us.

We hope your choice serves you well in your scientific endeavors and aspire to have the pleasure of doing business with you for years to come.

TABLE OF CONTENTS

| Sr. No. | Particular | Page No. |
|----------------|--------------------------------------|-----------------|
| 1. | Packing List..... | 7 |
| 2. | Product Specification of GDS020..... | 8 |
| 3. | Safety and Warning..... | 9 |
| 4. | Safety Precautions..... | 10 |
| 5. | Unboxing of The Product..... | 11 |
| 6. | Product Identification..... | 12 |
| 7. | Installation on Wall..... | 13 |
| 8. | Installation on Lab Bench..... | 15 |
| 9. | Operating The Unit..... | 16 |
| 10. | Replacement of Air Filter..... | 17 |
| 11. | Suggested Glasswares for Drying..... | 18 |
| 12. | Troubleshooting..... | 19 |
| 13. | Warranty Registration..... | 21 |
| 14. | Statement of Warranty..... | 23 |
| 15. | Contact Information..... | 24 |

PACKING LIST

| SR. No. | ACCESSORIES BOX 1 | QTY (Nos) |
|---------|---|--------------|
| 1 | Glass Dryer Unit | 1 No. |
| 2 | PEGS (7,10,16mm) | 10 Nos. Each |
| 3 | Drip Tube Adapter (LHS, RHS) with N6 screws | 2 Nos. |
| 4 | Wall Mounting Bracket | 1 No. |
| 5 | Wall Mounting Screws | 2 Nos. |
| 6 | Drain Tube | 1 No. |
| 7 | Power Cable | 1.5 Mtr |

PRODUCT SPECIFICATION OF GDS020

| PARAMETERS | GDS020 |
|-------------------------|--|
| SAP Code | BLFGGDS02000000000 |
| SAP Description | GLASS DRYER |
| Heater | 600W \pm 10W at 230V (Finned Heater) |
| Fan | 2.4W (Axial Flow) |
| Timer | 0-60 Minutes |
| Dimensions (L x B x H) | 385 x 165 x 590 mm |
| Weight of the product | 7.5 kg |
| Max Temperature | 100°C |
| Power Input | AC 200 - 240 V, 50 Hz |
| Max Current | \pm 3A |
| Power Consumption | 750W |
| Mains Voltage | 230V |
| Warranty | 1 Year |

SAFETY AND WARNING



Important operating and maintenance instructions

Read the accompanying text carefully.



POTENTIAL ELECTRICAL HAZARDS

Only qualified persons should perform procedures associated with this symbol.



LIFTING HAZARD WARNING

The glassware dryer weighs around 8 kg. Take adequate safety measures when moving this device.

Equipment being maintained or serviced must be turned off and locked to prevent possible injury.



CAUTION

- On long hours of usages the glassware rack and body panels will get hot.
- The hot surfaces may cause burns to unprotected skin, or to materials which may be damaged by elevated temperatures.
- Each individual is responsible for his / her own safety.
- Always use the proper protective equipments (Clothing, Gloves, Goggles, etc.)
- Always follow good hygiene practices.
- Wipe the unit with dry cloth after usage.
- The unit should be plugged into power socket having proper earthing.



 
WARNING

Inadequate earthing at the installation facility can lead to hazardous electrical shocks. The manufacturer is not liable for any injury or death resulting from electrical hazards due to faulty earthing in the lab.

SAFETY PRECAUTIONS

1. Avoid mounting on old or dilapidated walls with poor strength.
2. Ensure the wall mounting is done by anchor plugs and screws of right strength.
3. Do not hang on or pull the unit when wall mounted.
4. Do not keep the unit on wet bench top.
5. Do not wash the unit with water.
6. Wipe the unit with dry cloth after usage.
7. Always ensure water is not dripping on the power socket of the unit.
8. Place glasswares only after complete draining of the water.
9. Ensure no water is poured into the pegs.
10. Do not change the air filter while fan is in running condition.
11. The unit should be plugged to standard 230V, 50Hz, 3 pin power socket.
12. The unit should be plugged into power socket having proper earthing.

UNBOXING OF THE PRODUCT

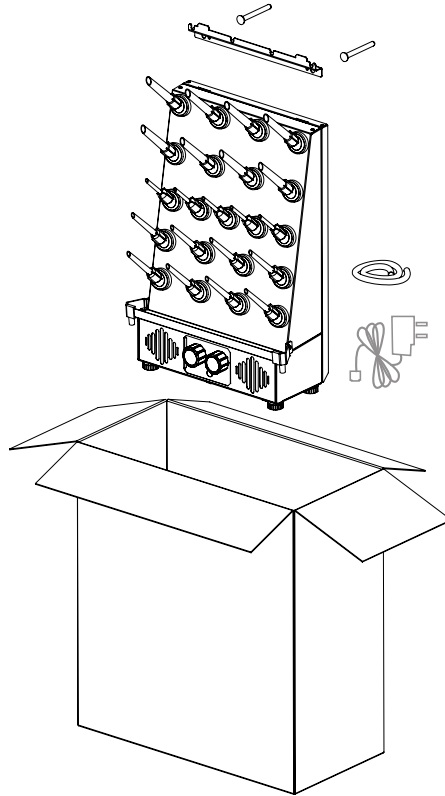



UNPACKAGING INSTRUCTION

1. Remove the packet containing Power Cable, Mounting Screws and Drain Tube.
2. Remove the packet containing PEGS, Drip Tube Adapters, N6 Screws.
3. Remove the wall mount bracket.
4. Remove the glass dryer unit safely.
5. Post unpacking the unit if any damage is found please report to the dealer / delivery agent.

(READ MANUAL BEFORE INSTALLATION)

PRODUCT IDENTIFICATION

  - A. POWER SWITCH
- B. POWER SOCKET
- C. AIR FILTERS
- D. HEATER REGULATOR
- E. TIMER
- F. LEVELING SHOES
- G. AIR FILTER PANEL
- H. DRIP TUBE ADAPTERS
- I. 10mm PEG
- J. 7mm PEG
- K. 16mm PEG
- L. WALL MOUNT BRACKET

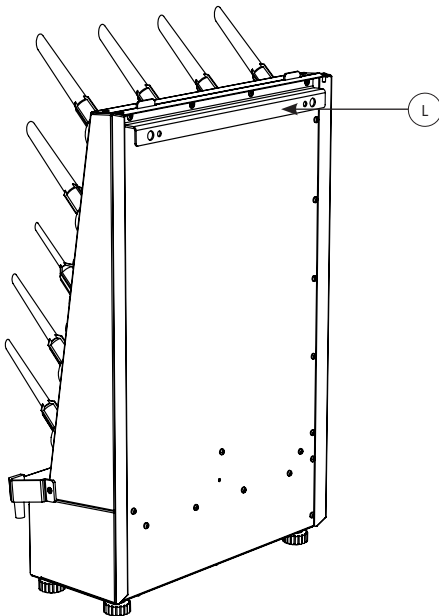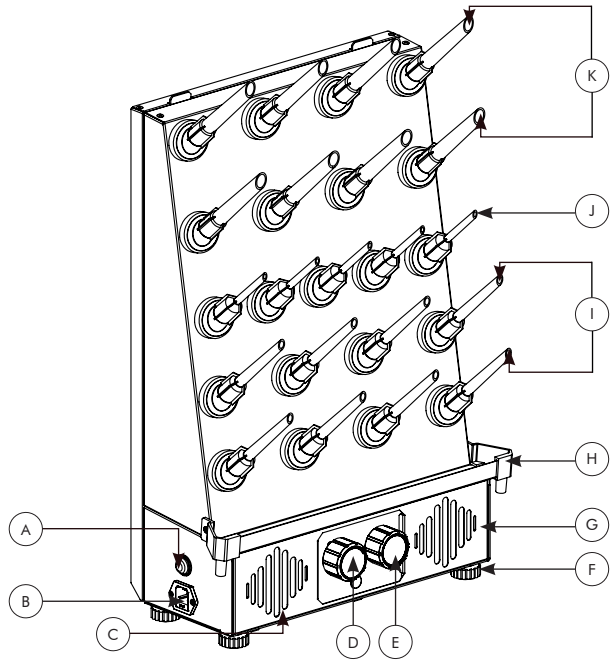

INSTALLATION ON WALL

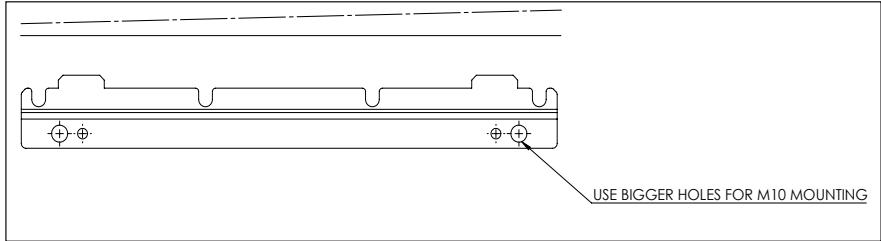 


Fig 13.1 Bracket Position

- Place the wall mounting bracket in position and drill (Mount the bracket slightly tilted towards the sink to drain the water through the drip tube adapters) as shown in the Fig 13.1.

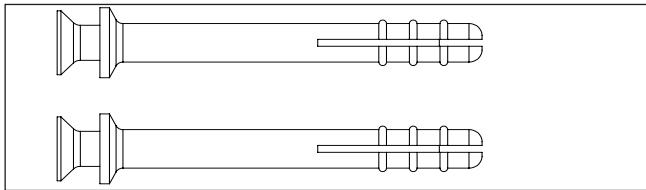 


Fig 13.2 M10 Wall Mount Screws

- Use M10 screws provided in the accessories to mount the bracket. Fix the wall plug on wall as shown in the Fig 13.2.

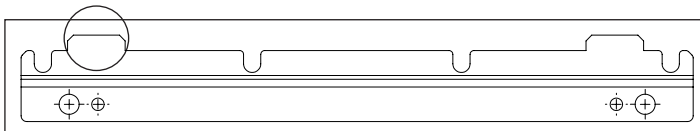 


Fig 13.3 Mounting Bracket

- Safely lift and fix the glass dryer on the hook given in mounting bracket as shown in the Fig 13.3.

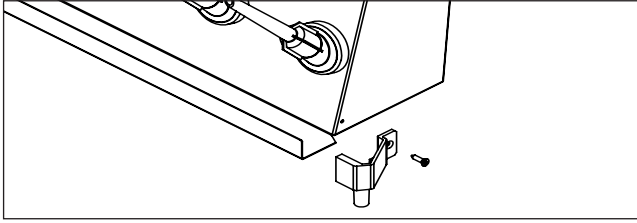 


Fig 14.1 Drip Tube Adapter Installation

- Use the N6 screws provided with the accessories to tighten the adapters.
- Insert the drip tube adapters on the extended surface provided in the pegs panel on both the sides as shown in the fig 14.1.



Fig 14.2 Pegs Installation

- The rib provided in the pegs should lock in the slot of the pegs adapter as shown in the fig 14.2.


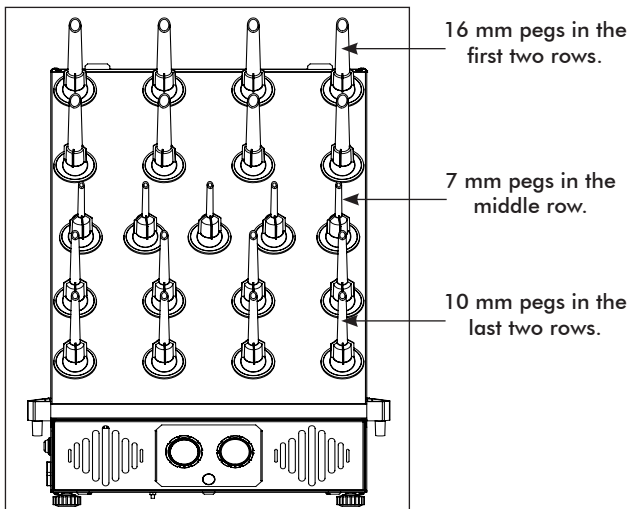 


Fig 14.3 Pegs Position

 INSTALLATION ON LAB BENCH

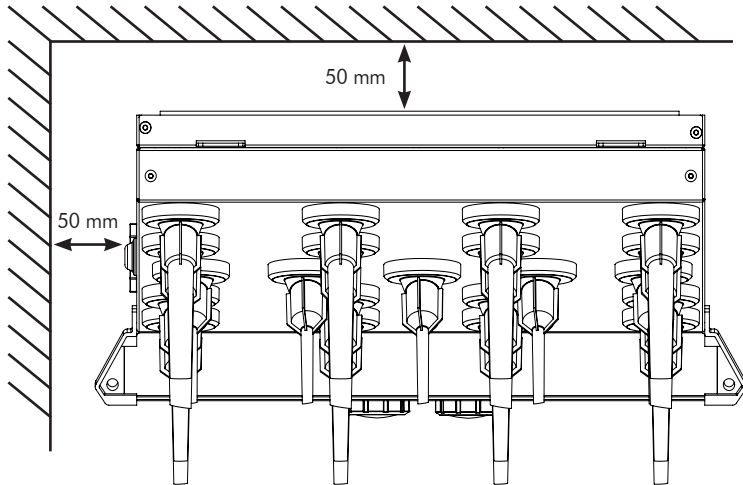

Instruction for using desktop variant:

1. Place a spirit level on top of the unit and level the shoes provided.
2. Connect the power cable in power socket on the unit.
3. Make sure a minimum of 50 mm gap is maintained around the unit.
4. Ensure that the power switch is OFF.
5. Connect the power cable to the wall socket.
6. Please ensure there are two 5A fuses in the integrated socket with fuse box.
7. Please make sure the heater regulator is operated as per Low, Medium & High, for better result it is recommended to set the regulator on "HIGH" mode.
8. The unit is now ready to operate.

OPERATING THE UNIT

1. Switch ON the wall power switch.
2. Switch ON the red illuminated power switch on the left handside of the unit.
3. Make sure the heater regulator is operated as per Low, Medium & High, for better result it is recommended to set the regulator on "HIGH" mode.
4. Set the timer for 15 mins minimum. The fans will start rotating once the timer is set.
5. The heater and fans will turn off automatically once the set time is reached.
6. Use appropriate set of glasswares as suggested.



WARNING

If the red indicator on the front panel doesn't turn on, switch off the unit, remove power cable from the wall and check earthing. If the problem persists, do not operate the unit and please contact Borosil Service Center.



Fig 16.1 Control Unit

REPLACEMENT OF AIR FILTER

1. Remove the air filter panel as shown in the figure 17.1.
2. Remove the old air filters from the panel.
3. Place new air filters inside the panel and push it back.

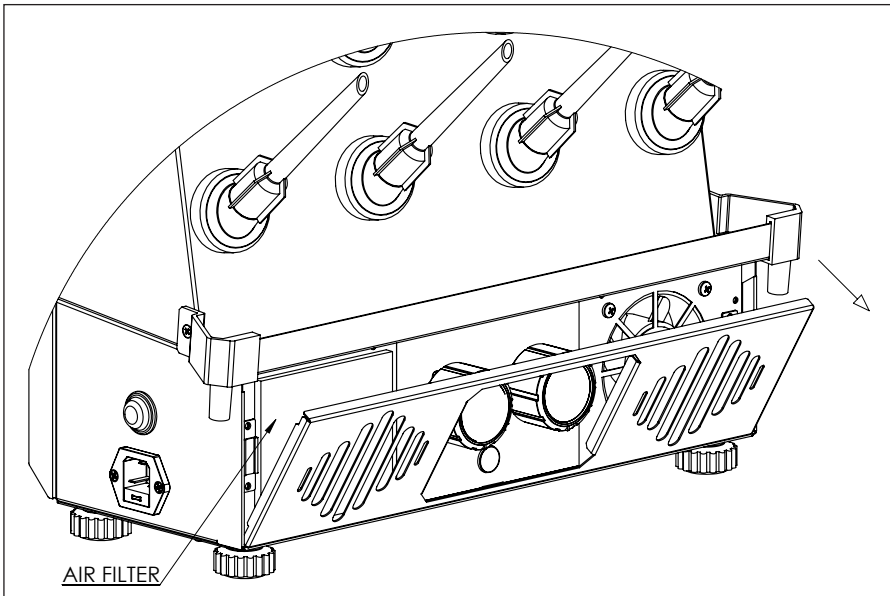 


Fig 17.1 Air Filter Replacement

SUGGESTED GLASSWARES FOR DRYING

For 16mm Peg:

1. 500ML, 1L, 2L - Volumetric Flasks
2. 250ML, 500ML - Cylinder Flasks
3. 500ML - Conical Flasks
4. 500ML - Round Bottom Flasks

For 10mm Peg:

1. 100ML, 250ML - Cylinder Flasks
2. 250ML - Round Bottom Flasks

For 7mm Peg:

1. 10ML, 25ML, 50ML - Conical Flasks
2. Test Tubes



CAUTION

Use only suggested GLASSWARES on the unit.

Usage of HEAVY GLASSWARES might break the plastic pegs.

TROUBLESHOOTING

1. The unit is not turning ON.
 - Check the power supply mains.
 - Make sure adapter is connected to the plug properly.
 - Check whether the main switch is **ON** or **OFF**.
 - Check if the illuminated switch is **OFF**.
 - Check if the unit is running and the switch is not illuminating, the switch needs to be replaced.
2. If the fuse is blown.
 - Remove the power cable from unit.
 - You can see a small tray below the socket. Pull the tray out.
 - Ensure the fuse further inside the box is not damaged. If damaged, please remove the fuse.
 - The nearest fuse in the tray is spare.
 - Replace the damaged fuse with spare fuse.
 - It is advised to maintain one spare fuse in the fuse tray.
3. No or low air blowing from pegs.
 - Make visual inspection of the pegs for any block in the pegs.
 - Check the filter for any block or dust.
 - If the filter is clogged please replace the filter with a new one.
 - Make sure the RED indicator on the control unit is ON and check whether you can hear the fan sound. If not turn on the Timer.
 - Remove the air filter and visually check the fan is running.
 - If the fan is not running, contact the service agent.

4. The Hot air is not blowing.
 - Check if the RED indicator on the control panel is ON or OFF.
 - Check if the timer is turning ON. The minimum set time should be about 5 minutes. This will illuminate the RED indicator.
 - If the timer doesn't turn ON please contact the Borosil Service Center.
 - Make sure the heater regulator is operated as per Low, Medium & High, for better result it is recommended to set the regulator on "HIGH" mode.
 - If hot air is still not blowing, please contact Borosil Service Center.

5. The unit is working but there is unexpected sound from the fan.
 - Please switch off the unit and disconnect it from A/C mains.
 - Ensure the air filters are not protruding inside the fan grill.
 - If any visual protrusion is found, please remove the air filter.
 - Visually inspect if any other object is obstructing the fan blade.
 - If any obstructions are found and is removable from the fan grill side, please do so.
 - Replace the air filter and switch ON the unit.
 - If the sound persists, please contact Borosil Service Center.



WARRANTY REGISTRATION

Please handover this registration form to the distributor from where you have purchased this product. The warranty is valid only when this warranty registration form is received by us within 30 days from the date of purchase.

Product: GDS020

Product Sr. No.: _____

Date of Invoice : _____

Invoice No.: _____

Customer name & address

Name : _____

Address: _____

Telephone: _____

E-mail: _____

Customer sign & seal

Dealer name & address

Name : _____

Address: _____

Telephone: _____

E-mail: _____

Dealer sign & seal

BOROSIL® Scientific

STATEMENT OF WARRANTY

Borosil confirms that this product has been manufactured in accordance with our technical specifications and quality requirements.

- Borosil warrants the product from manufacturing and workmanship defects for a period of 12 months from the date of invoice.
- Warranty is void, if equipment is not operated as prescribed in the operating manual supplied along with the unit.
- To be covered under warranty.
 - » Units have to be connected to standard 230V, 50Hz, 5A wall sockets with proper earthing for GDS020.
 - » Wear and tear of the equipment surface due to handling will not be covered under warranty.
 - » Warranty does not cover rust and physical damage to metal parts due to corrosive environment in the lab.

Terms:

- » In the event of malfunction due to defect, the buyer will have to follow the Borosil’s service process.
- » Certain units can not be serviced / rectified at the buyer’s place and the units may have to be brought to Borosil’s service center as advised by Borosil’s representatives.
- » In no event shall Borosil be liable for consequential or incidental damages.

| | | |
|----------------------------------|--------------|--------------------------------|
| INVOICE DATE | BUYER | AFFIX SERIAL NUMBER |
| INVOICE# | | |
| Dealer name & address | | Dealer sign & seal |
| | | |

BOROSIL SCIENTIFIC LIMITED

Corporate Office : 1101, Crescenzo G-Block, Opp. MCA Club, Bandra Kurla Complex, Bandra (E), Mumbai-400051, India



: MANUFACTURED BY :

Borosil Scientific Limited

Plot No.7, Sr. No. 234, 235 & 245,
Indialand Global Industrial Park,
Hinjewadi Phase 1, Pune - 411057

Write to us on above address.

: MARKETED BY :

Borosil Scientific Limited

1101, G-Block, Parinee Crescenzo,
BKC, Bandra East, Mumbai - 51

Maharashtra, India

: CUSTOMER CARE CONTACT :

Phone : 1800 22 4551 | Email : lab.support@borosil.com

Website : www.borosilscientific.com